 


Copyright © ICY DOCK International. All Rights Reserved. 650275 VER 1.0

1

Package Contents • Packungsinhalt • Contenu • Contenido del paquete • 包装について • 包装説明 • 包装说明




Device



User Manual



M3*6 screws for Device × 10

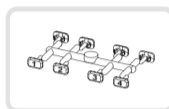


2 x Drive ID Plugs

Note: Please use the included screws to secure the device

2


Device Information • Geräteinformationen • Informations dispositif • Información del dispositivo • 本体説明 • 機體説明 • 机体说明

▼ Front View

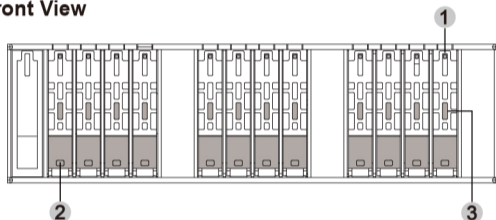

- 1 LED Indicator (Power: solid green LED; Drive access: flashing green LED)
- 2 Drive Tray Ejection Button
- 3 Slot for Drive ID Plug


▼ Side View

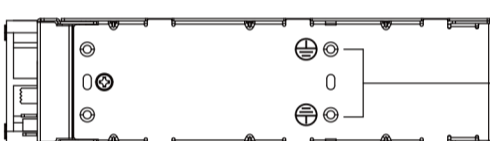

Grounding Screw Holes


Note: When installing the ToughArmor MB872M2P-B, only the lower screw holes have to be secured. This device can be installed upside down if desired

▼ Rear View

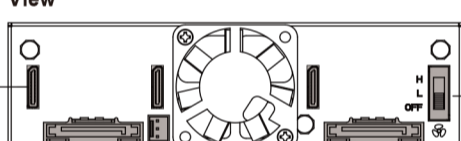

OCulink(SFF-8612) 3 Pin Fan Header 15 Pin SATA Power Fan Speed Control

▼ Drive Tray Inner View

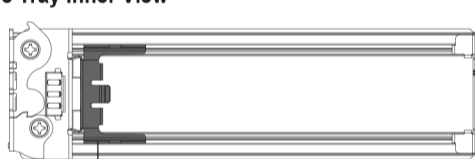


Adjustable M.2 SSD Locker

Metal Pin to Align M.2 Connector


3

Installation Guide • Installationsanleitung • Guide d'Installation • Guía de instalación • 製品の組み込み手順について • 操作步驟 • 操作步驟

3-1

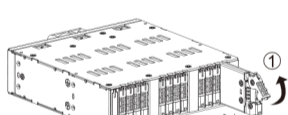


3-2

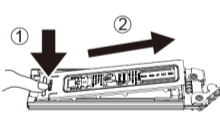


3-3

Remove the protective film from thermal pad before installing the SSD

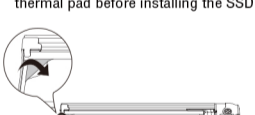

3-4

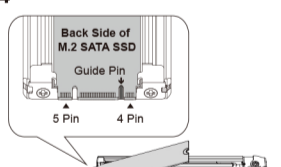


3-5


Secure the drive with adjustable M.2 SSD locker



3-6

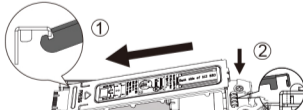


3-7

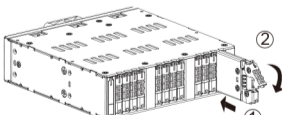

4

Device Installation • Installation eines Gerätes • Installation du dispositif • Instalación del dispositivo de • デバイス取付手順 • 装置安裝步驟 • 设备安裝步驟

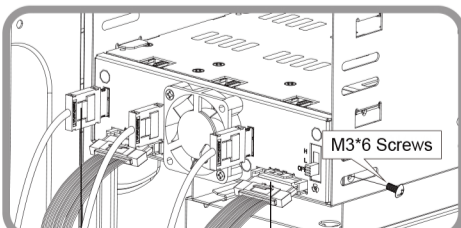

OCulink Cable

*OCulink cable is not included

15 Pin Power Connector

Note: If the drive is not detecting by the system, go to "device manager", right click on "disk drives" and then select "scan for hardware changes" to preform manual hardware refresh

